



6PCS *10w bee eyes shaking head + laser



Use Manual

Thanks for using our LED Stage Lighting Equipment. Before using, please read the instruction carefully. The instruction include important installing and using information. Please use the fixtures following the instruction and keep the user manual properly.

Our product use engineering plastic shell which is new, beautiful and can bear high temperature and high hardness metal body. Our product strictly follow the standard of CE and CCC to design and product. It's conform to the international standard DMX512 signal protocol. It's can be use alone or connect together. It's have rotation fast, low noise and multifunctional as the product's feature. It's special for KTV, Dance hall, Night club, Bar and so on.

1. Safety Instruction

- Please keep this User Guide for future consultation.If you sell the unit to another user,be sure that they also receive this instruction booklet
- Unpack and check carefully there is no transportation damage before using the unit.
- Before operating,ensure that the voltage and frequency of power supply match the power requirements of the unit
- It's important to ground the yellow/green conductor to earth in order to avoid electric shock.
- The unit is for indoor use only.Use only in a dry location
- The unit must be installed in a location with adequate ventilation,at least 50cm from adjacent surfaces.Be sure that no ventilation slots are blocked
- Disconnect main power before replacement or servicing.
- Make sure there is no flammable materials close to the unit while operating as it is fire hazard.
- Use safety cable when fixes this unit.Don't handle the unit by taking its head only,But always by taking its base.
- Maximum ambient temperature is $t_a:40^{\circ}\text{C}$ Don't operate it where the temperature is higher than this.
- Unit surface temperature may reach up to 85°C Dont touch the housing bare-hand during its operation.Turn off the power and allow about 15 minutes for the unit to cool down before replacing or serving.
- In the event of serious operating problem,stop using the unit immediately.Never

try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type Spare parts.

Menu:

Menu	Description
Addr	A001---A512 address code
CHnd	16CH channel choice
SLnd	Run mode selection (DMX auto sound slave)
Shnd	Sh 0 Sh 1 Sh 2 Sh 3
SenS	Sound sensitivity adjustment (0-99)
LED	ON, OFF screen always on setting
DISP	YES, NO display Forward and backward setting
RPan	YES, NO motor X Forward and backward setting
Tilt	YES, NO motor Y Forward and backward setting
LoAd	YES, NO factory data reset
rEst	System reset

Channel:

16CH	Function	DMX No	Description
1	X axis	0-255	
2	X axis fine tuning	0-255	
3	Y axis	0-255	
4	Y axis fine tuning	0-255	
5	X Y axis speed	0-255	Speed from fast to slow
6	Wash total dimmer	0-255	Linear dimming from dark to brightness
7	Wash strobe	0-9	No function
		10-255	Synchronous strobe speed from slow to fast (1HZ~25HZ)
8	R dimming	0-255	Red dimming from dark to brightness
9	G dimming	0-255	Green dimming from dark to brightness

10	B dimming	0-255	Blue dimming from dark to brightness
11	W dimming	0-255	White dimming from dark to brightness
12	Rotation motor	0-127	0-360°index
		128-191	The motor rotates clockwise from fast to slow
		192-255	Motor rotates counterclockwise from slow to fast
13	Green laser	0-127	Laser strobe from slow to fast
		128-255	Dimming from dark to brightness
14	Macro function	0-29	CH1 to CH13 works
		30-149	auto
		150-255	Sound control of light
15	Auto speed	0-255	Speed from fast to slow
16	reset	0-240	No function
		250-255	Light reset within 3sec

Technical parameter:

Voltage: AC100-240V 50/60 HZ

Power: 120W

Source 1: 6pcs Cree 10W RGBW 4in1 LED

Source 2: 1pcs 515nm green laser

Channel: 16CH

Control mode: DMX512, master-slave, auto, sound

X axis: 540°

Y axis: 180°